

**Installation Notes for the PS Engineering PS30EX Remote Intercom**

**Rev A**

**March 2016  
GRT Avionics, Inc**

Refer to the PS Engineering manual (provided on the GRT Avionics website) for installing the intercom. This manual describes all electrical connections required, with the exception of those to the Horizon HXR.

### **Electrical Connections to the HXR**

Any available serial port may be used to control the PRI30EX.

<b>PRI30EX Connection</b>	<b>HXR Connection</b>	<b>Notes</b>
Pin 6 (Serial Output)	Serial Input of any unused serial port	Set Input to “PRI30EX Remote Intercom”, 9600 baud
Pin 19 (Serial Input)	Serial Output of any unused serial port	Set Output to “PRI30EX Remote Intercom”, 9600 baud